

C201AU

Owner's manual

Manuel d'utilisation et d'entretien

Libro de instrucciones de uso y mantenimiento

WARNING!

Do not use this machine if there are signs of damage (cracks, breaks), if the power cord is damaged, or if you suspect that there may be an internal defect (for example, after the machine has fallen).



If the power cord is damaged, a manufacturer-authorised service centre must replace it since a special tool is needed to access it.

Read the rating-plate located under the machine; make sure the voltage and input ratings comply with the system's capacity.

Plug the machine into a grounded outlet.

While moving the machine, avoid tugging on the power cord.

Disconnect the machine from the electrical power source by pulling the plug. Do not disconnect it by pulling on the cord, since this could damage the machine.

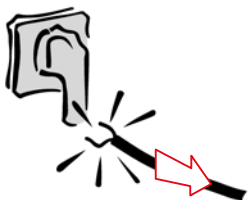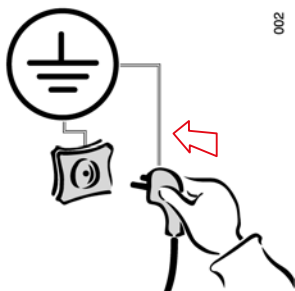

Do not leave the machine unattended while it is plugged in.

Do not let children or other incompetent persons use the machine.

Do not attach devices that exceed the indicated input rating to the machine!

Only use the machine's original accessories, which are guaranteed compatible by the manufacturer.

This machine has been manufactured for use in enclosed (covered) areas.

Do not submerge the machine in water!

Not for space heating purposes.



Do not point the steam jet at persons or other living beings. This machine produces high-temperature steam. Avoid direct contact with the skin.

ATTENTION! danger of burning.
WARNING: danger of scalding.

Vapor must never be directed toward equipment containing electrical parts, like the inside of ovens.

Do not place any type of substance (detergents or anything else) in the steam generator if not specifically approved by the manufacturer.


Before using the machine to clean surfaces that may get damaged (e.g. synthetic fibres, plastics, wood, etc.), check their capacity to withstand high temperatures by doing a trial run on a hidden area and by carefully following manufacturer's instructions.

Only use original replacement parts for any necessary repairs. Please see an authorised service centre.

Disconnect the equipment from the electrical system before proceeding with cleaning or maintenance operations. Disconnect after use.

The aperture for cleaning the steam generator must not be open during use.

HOW TO CONNECT THE ACCESSORIES


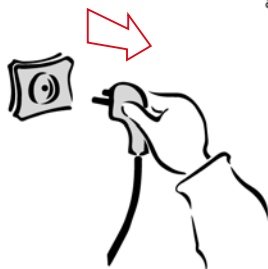


Make sure that the appliance is disconnected from the mains socket.


Attach the connector (C) to the heater as follows:

Hook the socket flap on to the lower hook of the connector.

Pull the flap well open.

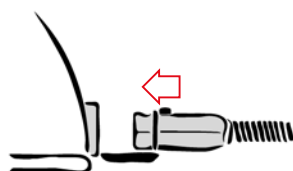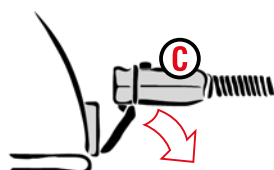

Insert the connector into the socket until it clicks into place.

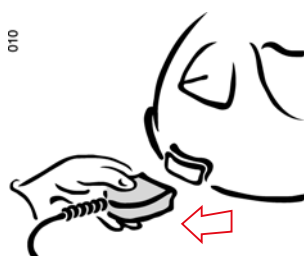


Press the button to unlock and extract the connector.

CABLE REWIND



Turn the steam generator as shown in the diagram in order to rewind the cable inside the coiler. Fasten the cable terminal with the special lock.

HANDLE

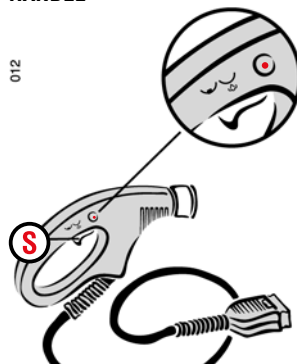

This is attached to the heater by means of the connector (C) and enables all the cleaning accessories to be attached. The grip has a button for the distribution of steam (S)

and a safety lock. To block or release distribution of the steam use the button positioned on the side of the grip. The lock and release position is indicated in the icon positioned on this grip. The push-button for delivering steam is a low voltage (12V) switch. The handle is provided with a selector for steam level. Select the wished steam level, then push the button (S) to release steam. 1 = low - 2 = middle - 3 = max




EXTENSIONS

These are connected to the handle so that the work field is widened. The extensions have the same attachment.


HOW TO FASTEN THE PIECES TOGETHER

All the pieces have a bayonet joint. To connect the handle to the extensions or to the accessories simply insert and push as shown in the drawing (A). To extract the accessory turn the ring clockwise and pull (B).

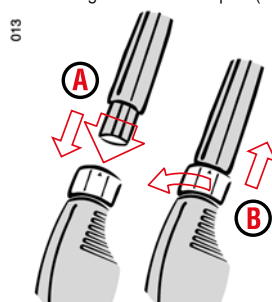


LARGE BRUSH

The large brush can be used together with a cloth. The two spring clamps fasten the cloth at the sides.

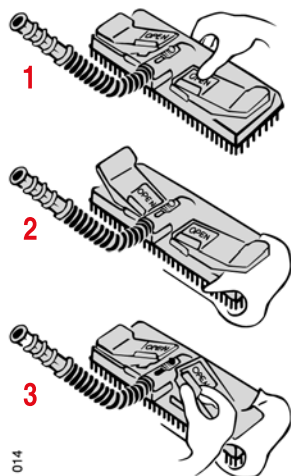

1. Press on the writing "open" to block the clamp in an open position.
2. Place the cloth in the correct position.
3. Press on the writing "close" to block the cloth.

The large brush has an articulated joint so that the handle can be turned 90° to the right and to the left.

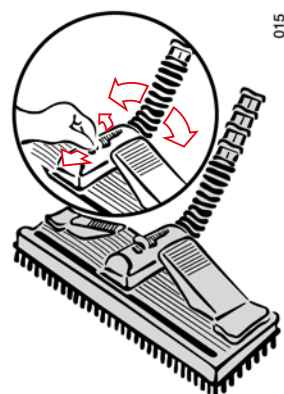


To bend the large brush, lift the tab and pull it in the direction shown in the diagram so as to free the handle. To lock the handle into position: hold it upright, turn the tab in the opposite direction to the one shown in the diagram.

NOZZLE




This is attached to the extensions or directly on to the handle. It can reach even the most awkward corners.

MEDDLERS AND SCRAPER

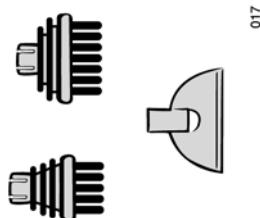


This enables special points to be cleaned which would be otherwise inaccessible to the other accessories. They are attached to the end of the nozzle.

WINDOW CLEANER

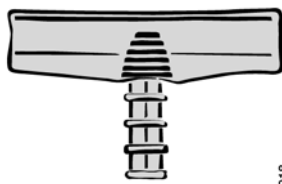

This is attached to the extensions or directly on to the handle. The window cleaner combines steam with the mechanical action of a rubber spatula.

TRIANGULAR BRUSH

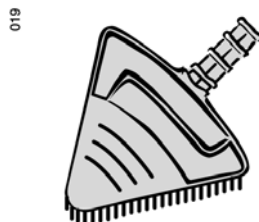

This is attached to the extensions or directly on to the handle. Can be used to clean fabric. A cotton or microfiber cloth can be fixed to the brush for cleaning operations.

IRON



For instructions on how to use the iron please refer to the relevant instruction handbook. Other accessories other specific accessories are available as optional.

HOW TO FILL WITH WATER



The appliance is equipped with an automatic filling system, and may be filled with water while the heater is under pressure.


ATTENTION!


 
Do not use distilled or demineralized water. It could cause the unit to malfunction.




HOW TO WORK THE HEATER


Insert the plug into the mains socket.
Press the start button 
The warning light  switches on.
This shows that the appliance is working.

Press the button  to use the iron.
The iron can be used without the steam heater, for no-steam ironing.

 The warning light  switches on to indicate that the iron is operating in the economy mode.
Wait a few minutes until the warning light  switches off. Steam is now available for cleaning or ironing.

NB: while the appliance is in use, the warning light  will switch on and off several times; this warning light may be ignored while the appliance is being used.

An electronic bell will ring to warn that there is no water in the heater.

The warning light  indicates that the cold water reservoir is empty.
The appliance has an economy mode which is activated automatically when steam is not used for a few minutes.
The ironing is normally done in the economy mode.



M = Pressure gauge
This indicates the pressure inside the steam generator


Each time the appliance is used, a few drops of water may come out when the start button is pressed for the first time.

This is quite normal and is due to condensate which forms when the tube is still cold.
The same thing may happen after an interval of any great length.

STEAM CLEANING


CLEANING BETWEEN FLOOR TILES

023

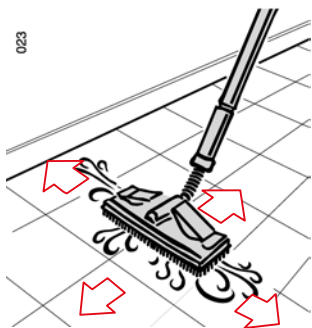

To clean the spaces between the floor tiles use the large brush as shown in the diagram.

024

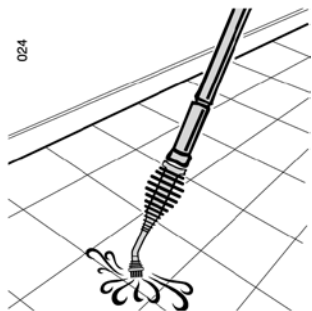

Use the meddler as shown in the diagram for a more energetic cleaning action.

Wipe away the dissolved dirt with a dry cloth.

The large brush can be used with a cloth.

Use the spring clamps to fasten the cloth on either side.

025



Use as an ordinary brush: the steam will dissolve the dirt which will remain on the cloth.

The brush handle can be articulated so that it will turn 90° to the right and to the left.

WAX REMOVAL

Remove floor wax by rubbing the brush sideways and backwards and forwards. Use a cloth to remove residual wax. The floor will be completely clean.

HOW TO APPLY WAX

026




Put a layer of wax on the cloth and apply it by using steam together with a mechanical action.


The wax will be more fluid and will be distributed more evenly.

WALL TILES

027

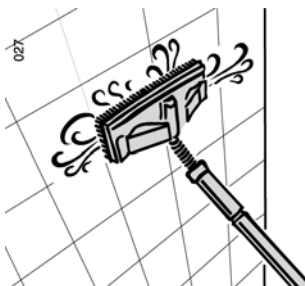

028

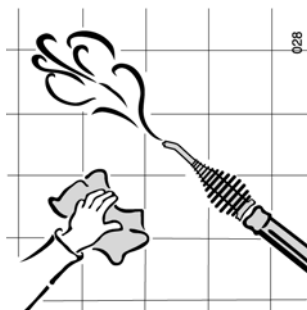


The large brush can be used with or without the extensions to clean tiles.

The large brush is suitable for cleaning walls.

Together with the nozzle use a dry cloth to remove any dirt from the walls.

CRACKS

029

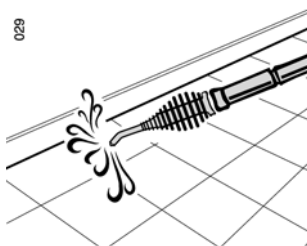

Clean the cracks between the skirting-board and the floor.

In this way the cracks will be disinfected and any insects or parasites eliminated.

BLINDS

030




Use the large brush on the extension to clean blinds.

FABRIC




Use the small brush with the absorbent hood to clean sofas, armchairs, cushions and mattresses.

RADIATORS

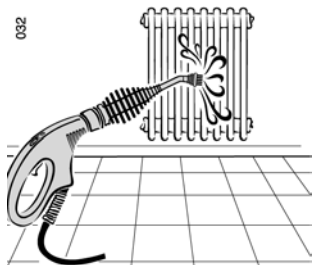


Use the meddlar to clean the radiator elements. Place a dry cloth under the radiator to catch any dirt.

WINDOWS

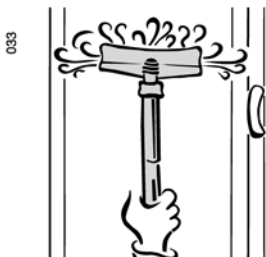


A combination of steam and the mechanical action of the spatula ensures that the window cleaning accessory will give you perfectly clean windows, glass and mirrors. Place a dry cloth underneath to catch any dirt.

CARS AND MOTORBIKES

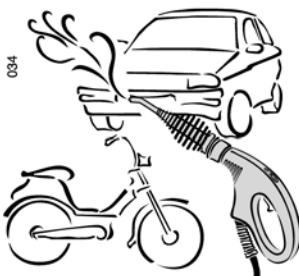

Use the steam to remove grease and dirt from the engine, wheels and mudguards as well as to clean and disinfect the internal car upholstery.

KITCHEN

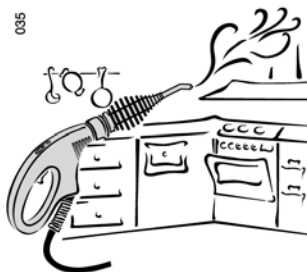

Use the steam to clean and disinfect the kitchen and electrical appliances such as the oven, fridge etc. Grease and dirt can be removed from the oven and the gas rings.

NB: electrical appliances must be unplugged from the mains during steam cleaning.

BATHROOM



Use the steam to clean and disinfect the bathroom: floor, walls, fittings etc.

WHERE ANIMALS LIVE



Use the steam to clean and disinfect all the places where domestic animals, such as dogs, cats, birds etc. live.

Use the steam to disinfect corners, food bowls and bird cages. Do not spray the animal directly.

■ MAINTENANCE

A certain amount of deposit will form inside the heater according to how much it is used and how hard the water is.

HOW TO REMOVE DEPOSIT FROM THE HEATER

Check that no accessory is connected to the steam generator. Unscrew the metal cap on top of the heater unit. Pour 1/2 a glass of white wine vinegar into the empty heater and screw on

the cap. Make sure that there is water in the cold water reservoir.

Switch on the heater until the correct temperature has been reached.

Switch off the appliance and wait until the internal pressure has subsided.

Unscrew the metal cap again, empty the heater and rinse thoroughly with clean water.

Close by screwing on the metal cap.

Do not empty the steam through the iron or the nozzle.

HOW TO REMOVE DEPOSIT FROM THE COLD WATER RESERVOIR

The cold water reservoir is controlled by sensors, which may not work properly when there is calcium build-up. Therefore occasionally it is necessary to pour 1/2 glass of white vinegar in the cold water reservoir, and then to spray a generous amount of steam into the reservoir using the steam nozzle. Following this operation, rinse well with water.

■ DISPOSAL INSTRUCTIONS AND ENVIRONMENTAL STANDARDS



Dispose of packaging and used filters in accordance with current standards. Follow the instructions for any material recycling (segregated collection) in your area. The symbol of a crossed out basket on the device specifies that the product should be disposed of separately from domestic waste at the end of its useful life.

The user is responsible for taking device to an appropriate collection device to an appropriate collection point. Suitable segregated collection for ensuing recycling, treatment and environmentally compatible disposal helps prevent potentially negative effects on the environment and on health and favors recycling of the product's materials. For more detailed information on available collection systems, consult your local waste disposal service or the shop where the product was purchased.